




 
 

 








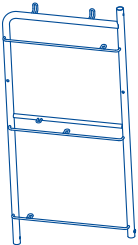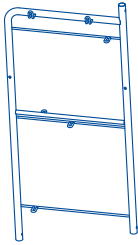


ASSEMBLY INSTRUCTIONS



Outdoor Storage Cart with Removable Baskets

Here's What You Get!

						
A Side Frame Right	B Side Frame Left	C Middle Bar	D Handle	E Bottom Frame Back	F Bottom Frame Front	G Rubber Washer
1 pc.	1 pc.	2 pcs.	1 pc.	1 pc.	1 pc.	4 pcs.

 								
H Long Screw (35mm)	I Rubber Bumpers	J Caster	K Caster Bolt	L Nut	M Removable Basket	N Short Screw (16mm)	O Crescent Wrench	P Allen Wrench
4 pcs.	2 pcs.	2 pcs.	2 pcs.	2 pcs.	3 pcs.	6 pcs.	1 pc.	1 pc.

Your Outdoor Storage Cart is ideal for storing and transporting sand and water toys as well as a variety of lightweight active play items. Hang hoops and jump ropes on the handy hooks, stock the baskets with an assortment of plastic pails, racks, shovels, sifters, and molds, and you're all set for sand and water exploration – and more!

Baskets are easy to remove and carry to learning areas. Wire mesh design allows wet items to drip dry. Large casters make it easy to move the Storage Cart; rubber bottom bumpers keep it in place. Sturdy metal construction and

weather resistant components will provide years of learning fun – indoors or out!

Follow these step-by-step assembly instructions, pack your cart, and go where the action is!

Cart may be cleaned with any mild cleaning solution, or simply hosed down and allowed to drip dry. To keep cart in best condition, bring inside after outdoor use.

CAUTION
Adult assembly required due to the presence of small parts, sharp edges, and / or sharp points.


ASSEMBLY INSTRUCTIONS



Outdoor Storage Cart with Removable Baskets (continued)

1. Position Side Frames (A, B) so that hanging hooks face outward and basket rails face inward.


Connect frames with Side Bars (C). Insert Rubber Washers (G) between Side Bars and Frame. Use Allen Wrench (P) to tighten Long Screws (H).

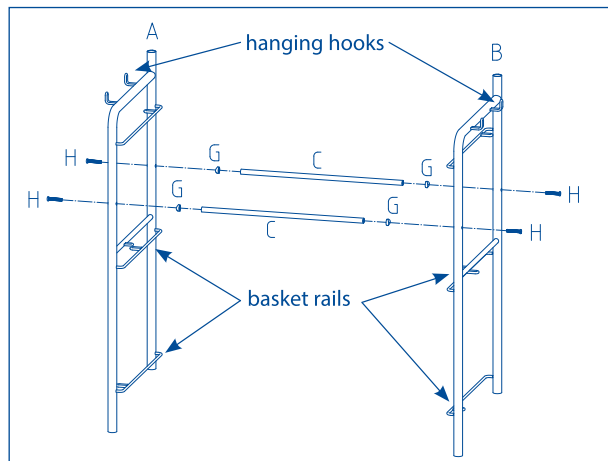

2. Attach Handle (D) and Bottom Frames (E, F) with Short Screws (N). Note that Back Bottom Frame goes on the same side as Handle, positioned so Casters face inward.


Insert Rubber Bumpers (I) into holes on bottom of Front Bottom Frame.

Attach Casters (J) so they are facing inward as shown. Use Crescent Wrench (O) to tighten Nut (L) to Caster Bolt (K).

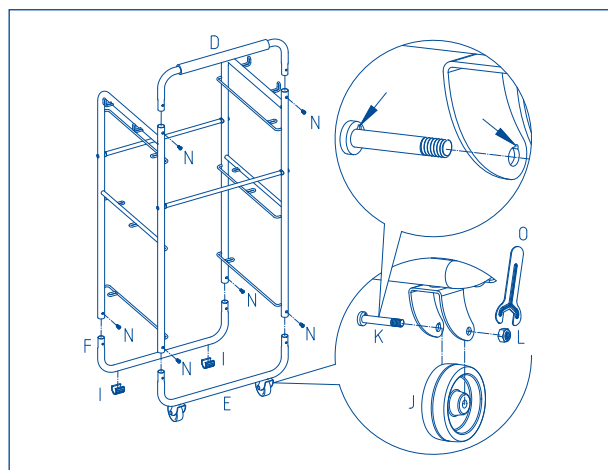

3. Insert the Removable Baskets. Fit the corner loops on the baskets into the rails and slide. Tip up slightly to move basket past stopping loops on rails.

To remove basket, slide forward and tip slightly to continue sliding past stopping loops.

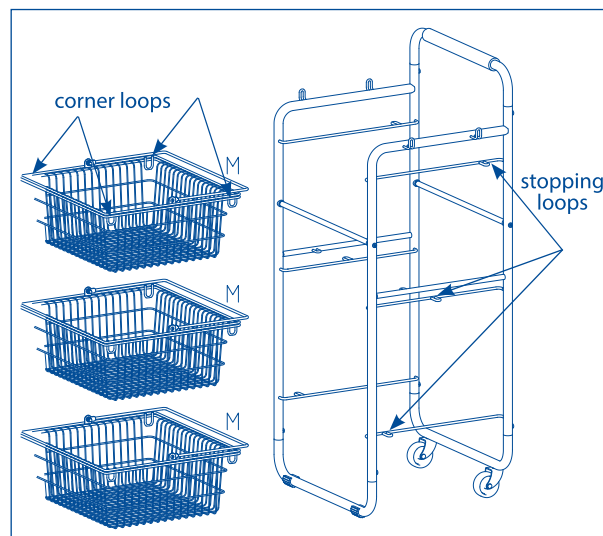

4. Fill your cart with your favorite sand & water toys & other active play items and you're ready to go wherever the learning fun leads you!

