Really Good Stuff®

Standing Workstation Assembly Instructions

(19) Attach the other metal leg with bottom for wheels **S** to the other side with 6 binder posts and screws **A1**. Place the screws from the outside into the posts from the inside.

(20) Attach the foot rest **T** to the two metal legs with the 4 short binder post and screw sets **Z**. Place the screws from the outside into the posts from the inside. Then screw in the 2 feet **H1** into the bottom of metal leg **R**.

(21) Attach a wheel **G1** to the metal leg **S**. Place a lock washer **F1** and cap **B1** from the top into a flat washer **E1** and bolt **D1** from underneath. Repeat for the other 3 holes on the wheel. Attach second wheel to other end of the leg.

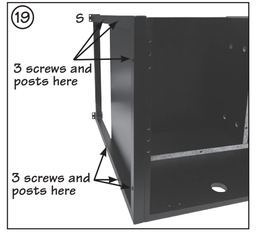

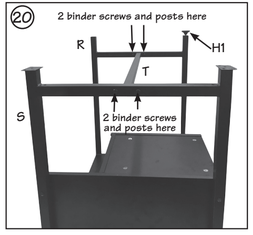

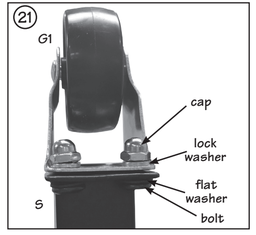

(22) Locate the desk top panel **A.** Insert 10 cam lock studs **X** into the plastic threaded holes and 4 stoppers **C1** into the noted metal lined holes below.

(23) Put the desk upright and insert 8 wood pegs **Y** into the holes around the top of the desk.

(24) Place the desk top panel **A** onto the unit by lining up the studs on the panel to the holes on the desk, making sure the two empty metal lined threaded holes go over where the drawer will be on the right. Secure with 10 cam locks **W**, 2 in the back, 2 on the left, 2 in the center, and 4 on the right. Slide in the assembled drawer halfway and screw in the remaining 2 stoppers **C1** into the underside of the desk top panel **A**.

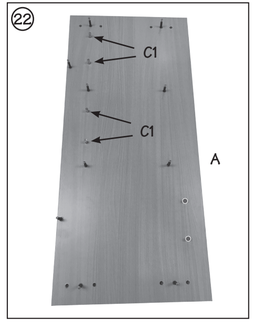

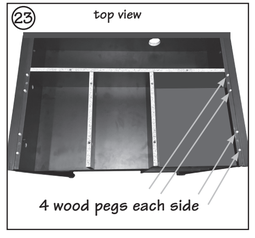

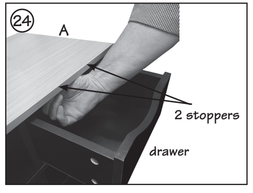

© 2017 Really Good Stuff® 1-800-366-1920 www.reallygoodstuff.com Made in China #164683

Really Good Stuff®

Standing Workstation Assembly Instructions

(25) Screw the 2 hinges **I1** into the predrilled holes in the back wall **F** with 4 short screws **V** each.

(26) Attach the rear lifting desk panel **B** to the hinges with 2 short screws **V** each. Place cam lock covers **L1** over cam locks if desired.

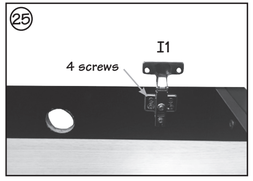

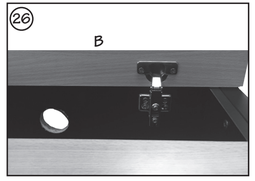

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:
- **Always place heaviest items in the bottom drawers/shelves.**
- **Never allow children to climb or hang on the workstation.**

© 2017 Really Good Stuff® 1-800-366-1920 www.reallygoodstuff.com Made in China #164683

Really Good Stuff®

Standing Workstation Assembly Instructions

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Congratulations on your purchase of this **Standing Workstation.** Adult assembly required.
WARNING: Serious or fatal crushing injuries can occur from furniture tip-over.

To help prevent tip-over:
- **Always place heaviest items in the bottom drawers/shelves.**
- **Never allow children to climb or hang on the workstation.**

This Really Good Stuff® product includes:

- **A** – Desk top panel
- **B** – Rear Lifting desk panel
- **C** – Left side panel
- **D** – Right side panel
- **E** – Large bottom panel
- **F** – Back wall
- **G** – Middle wall
- **H** – 2 Short vertical dividers
- **I** – 2 Shelves
- **J** – Lower left side panel
- **K** – Lower back panel
- **L** – Small lower bottom panel
- **M** – Drawer front panel
- **N** – Drawer left side panel
- **O** – Drawer right side panel
- **P** – Drawer back panel
- **Q** – Drawer bottom panel
- **R** – Metal leg
- **S** – Metal leg with bottom for wheels
- **T** – Foot rest
- **U** – 4 Long screws for drawer
- **V** – 12 Short screws for hinges
- **W** – 44 Cam locks
- **X** – 44 Cam lock studs
- **Y** – 32 Wood pegs
- **Z** – 4 Short Binder post & screw set
- **A1** – 10 Long Binder post & screw set
- **B1** – 8 caps
- **C1** – 6 Stoppers
- **D1** – 8 Bolts for wheels
- **E1** – 8 Flat washers
- **F1** – 8 Lock washers
- **G1** – 2 Wheels
- **H1** – 2 Feet
- **I1** – 2 Hinges
- **J1** – Assembly tool
- **K1** – Wrench to tighten wheels
- **L1** – 12 Cam lock covers

You may also have received a spare part of each piece of hardware.



Arrow on cam lock points toward entry hole upon insertion, and turns 180° clockwise to tighten.

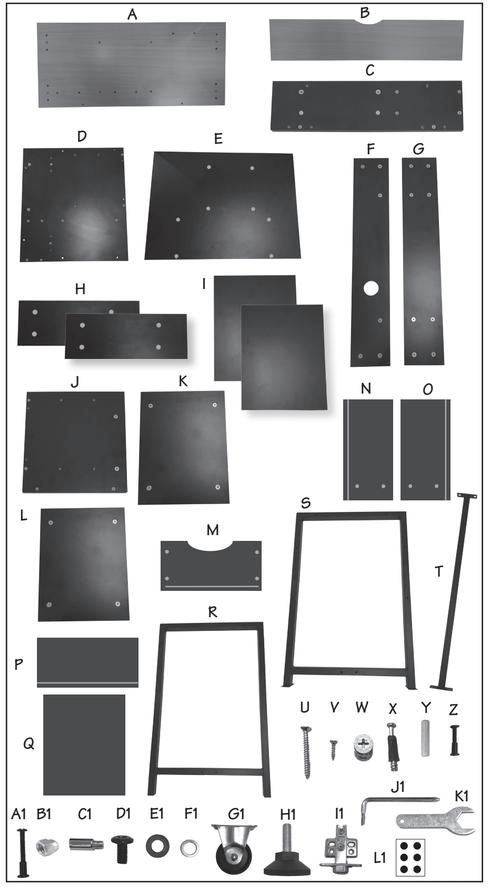

All instructional guides can be found online.

© 2017 Really Good Stuff® 1-800-366-1920 www.reallygoodstuff.com Made in China #164683

Really Good Stuff®

Standing Workstation Assembly Instructions

1. Locate the inside drawer front panel **M**. Screw in 4 cam lock studs **X** into the plastic-threaded holes on the inside of the panel.

2. With the fabric-lined edge facing the bottom, connect the left drawer side panel **N** to the drawer front. Insert 2 cam locks **W** and turn to secure. Repeat for the right drawer side panel **O**.

3. Slide the drawer bottom panel **Q** into the routered lines of the drawer side panels.

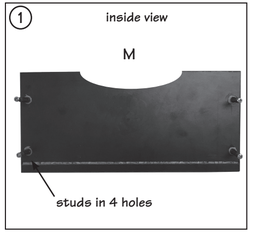

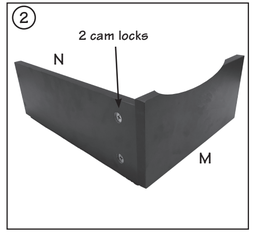

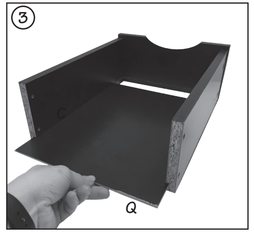

4. Attach the drawer back panel **P** to the left and right drawer sides with 2 long screws **U** on each side, making sure the routered line on back panel faces in to line up with drawer bottom.

5. Locate the large bottom panel **E** and screw in 8 cam lock studs **X** into the plastic threaded holes. Then locate the back wall **F** and connect to the back 2 studs of the bottom panel. Insert 2 cam locks **W** on the back side of **F** and turn to secure.

6. Attach the middle wall **G** in front of the back wall **F** on the bottom panel **E**. Insert 2 cam locks **W** on the back side of **G** and turn to secure.

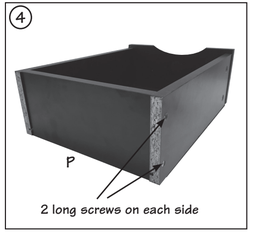

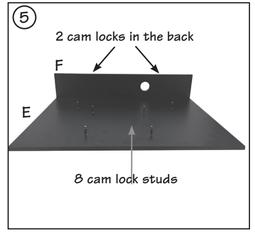

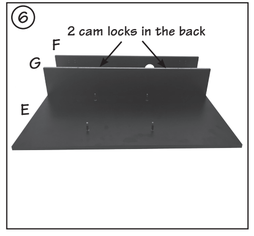

© 2017 Really Good Stuff® 1-800-366-1920 www.reallygoodstuff.com Made in China #164683

Really Good Stuff®

Standing Workstation Assembly Instructions

7. Insert the 2 dividers **H** to the bottom panel **E**. Install 2 cam locks **W** to secure the studs into each divider and turn to secure.

8. Flip the unit over to the right. Insert 2 cam lock studs **X** and 2 wood pegs **Y** into the center holes.

9. Locate the lower left side panel **J** and screw in 4 cam lock studs **X** into the plastic threaded holes. Connect the unfinished edge of **J** to the 2 studs and 2 wood pegs on panel **E**. Install 2 cam locks **W** to secure the studs at the bottom and turn to secure.

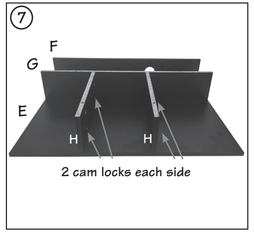

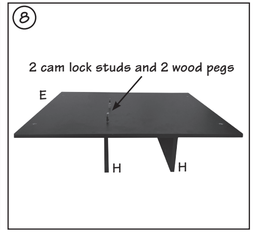

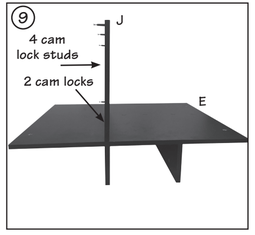

10. Locate the lower back panel **K**. With the finished edge facing up, connect to the lower left side panel **J**. Install 2 cam locks **W** to secure the studs on the right side of the panel where it connects to **J** and turn to secure.

11. Insert 2 wood pegs **Y** into the top of panel **J** and connect the small lower bottom panel **L** to **J**.

12. Carefully turn the unit to face you and then turn it 90 degrees so that you are looking at all the unfinished edges and the back wall **F** is at the top. Locate the 2 shelves **I**, insert 2 wood pegs **Y** into each and slide them into the middle space.

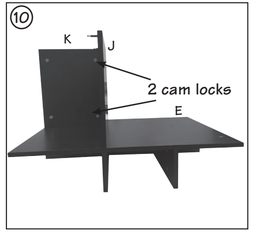

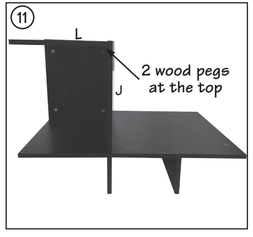

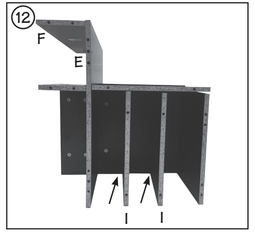

Helping Teachers Make A Difference®
© 2017 Really Good Stuff® 1-800-366-1920 www.reallygoodstuff.com Made in China #164683

Really Good Stuff®

Standing Workstation Assembly Instructions

13. Locate the right side panel **D** and insert 10 cam lock studs **X** into the plastic threaded holes and 10 wood pegs **Y** into the smaller holes (not the holes that go all the way through).

14. With panel **D** in front as shown in previous step, lift to connect to the unfinished edges of the assembled unit. Insert 10 large cam locks **W** to secure the studs: 2 underneath the unit, 2 inside the shelves, 2 on each side of the middle divider, and 2 on the top left into the back wall.

15. Flip the unit toward you so that panel **D** is now facing the ground.

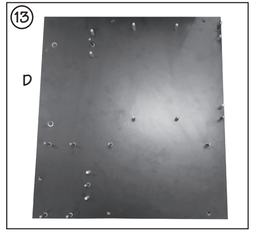

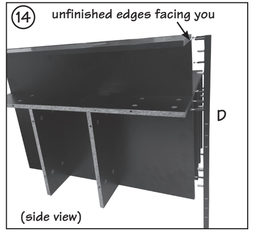

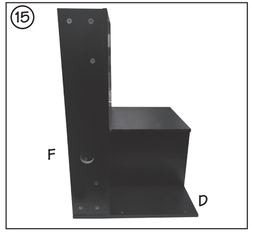

16. Locate the left side panel **C** and screw in 6 cam lock studs **X** into the plastic threaded holes.

17. Place 4 wood pegs **Y** in the holes at the top right and attach **C** to the unit. Insert 6 cam locks **W** to secure the studs: 2 underneath on the left, 2 on the front, and 2 under on the right.

18. Flip the unit so that the back wall **F** is facing the ground. Locate the metal leg **R** and attach to the right side. Screw 2 large binder screws **A1** into the threaded holes (you won't need the posts here). Insert 2 more binder screws **A1** from the outside of the leg, and screw into the posts from the inside.

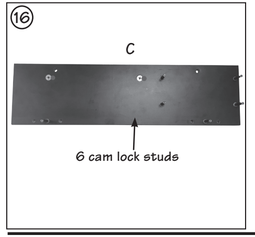

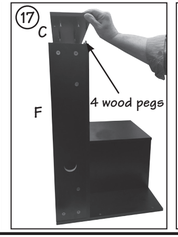

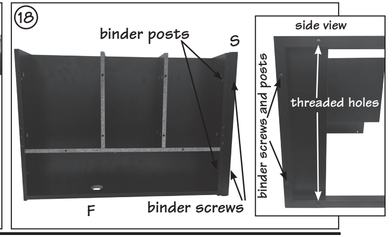

Helping Teachers Make A Difference®
© 2017 Really Good Stuff® 1-800-366-1920 www.reallygoodstuff.com Made in China #164683